

FoMako

4K NDI/SDI/HDMI/USB PTZ STREAM CAMERA

(User Manual V1.0)



FoMako

E-Mail: ivan@fomako.net

Website: www.fomako.net

Phone: 0086-18565635753

Address: 10F NiuLanQian Building, Minzhi, Longhua,
Shenzhen, China, 518000

Please feel free to contact us if you have any questions.

Please Note: Only NDI version cameras have NDI function, other version cameras don't have NDI function.

Copyright

All contents of this manual, whose copyright belongs to our corporation, cannot be cloned, copied or translated without the permission of our corporation.

Notice

Product specifications and information which were referred to in this document are for reference only. We may change, delete, or update any content at any time and without prior notice.

FCC NOTICE (Class A)



This product complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Note

This product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Class A ITE

Class A ITE is a category of all other ITE which satisfies the class A ITE limits but not the class B ITE limits. Such equipment should not be restricted in its sale but the following warning shall be included in the instructions for use:



Operating this equipment in a residential environment may cause radio interference.

European Community Compliance Statement (Class A)




This product is herewith confirmed to comply with the requirements set out in the Council Directives on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive 2014/30/EU.

Quick Start

◆ Add Cameras to Your Network

Please do the connections as the following. You must have a router in your network, then router will assign IP address for the cameras automatic. If you don't have router in your network, cameras can't get IP address from your network.

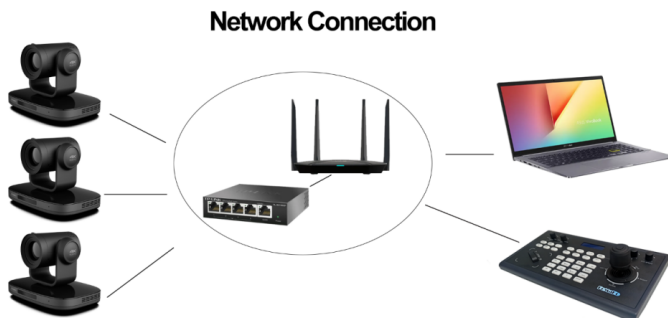

Camera's screen will show its IP address, you can visit camera's webpage by camera's IP address.

Tips: When you login the camera's webpage, you'd better change the IP from "Dynamic IP Address" to "Fixed IP Address", then camera will keep currently IP ,or when camera rebooted, router rebooted, router will assign a new IP address for the camera.


◆ Visit Camera's Webpage


Please use web browser such as: Google Chrome, Firefox or Safari to Visit camera's IP address

User name: admin Password: admin

◆ IP Streaming to Vmix or OBS

Tips: recommend to use VLC streaming in Vmix and OBS, it has lower latency.

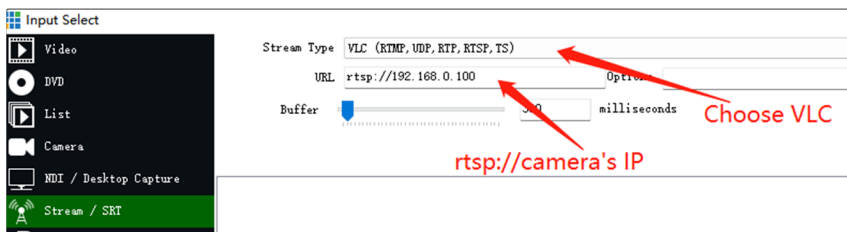

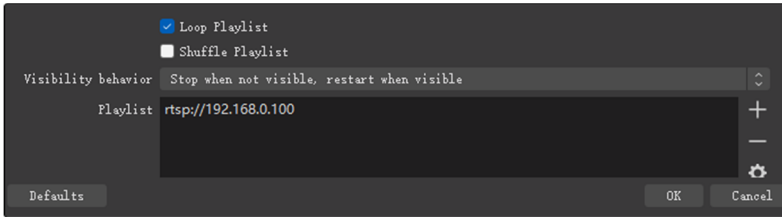

If you want to use normal RTSP stream:

RTSP UDP Stream URL: `rtsp://192.168.0.100:554/1`

Please note, you need change the IP address to your camera's IP address.


◆ **IP Steam to YouTube or Facebook**

YouTube, Facebook or other live broadcast platforms will supply Stream URL(server URL) and stream key for you.

Example for YouTube:

Stream URL: `rtmp://a.rtmp.youtube.com/live2/`

Stream Key: `8m8q-0yrrp-w95f-spd0-ft55`

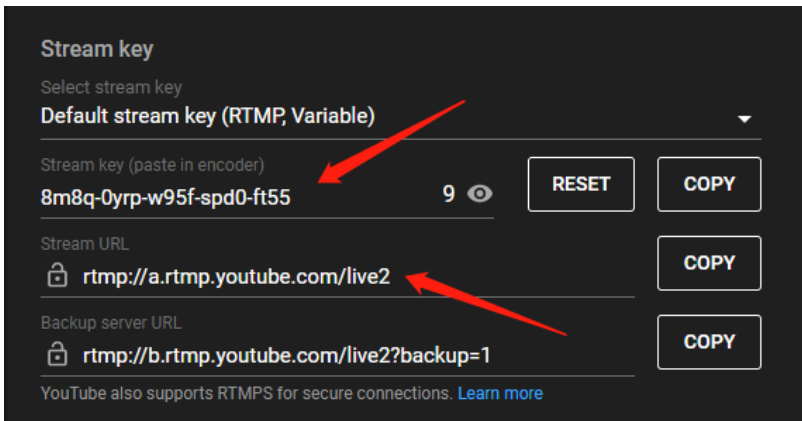

Now go to camera's webpage -> network -> RTMP Settings.

input the RTMP stream URL:

`rtmp://a.rtmp.youtube.com/live2/8m8q-0yrrp-w95f-spd0-ft55`

(Format: Stream URL/Stream Key)

Save and reboot the camera, camera will stream to YouTube.

RTMP(S) Settings

First Stream On Off Video Audio

MRL

Second Stream On Off Video Audio

MRL

Example for Facebook:

Server URL: <rtmps://live-api-s.facebook.com:443/rtmp/>

Stream Key: FB-117626344422167-0-AbzhlyyXbQGNT47w

Streaming software setup
Copy and paste the stream key into your streaming software.

Stream key

FB-117626344422167-0-AbzhlyyXbQGNT4

Once you start to preview the broadcast you have up to 5 hours to go live.

Advanced Settings

Persistent stream key

This can be reused every time you go live. You can only broadcast one live video at a time with your persistent stream key.

Backup stream

Once a backup stream is added to your live video, it cannot be removed. It will not affect your stream if you choose not to use it.

Server URL

rtmps://live-api-s.facebook.com:44:

This may be referred to as "URL" or "Address" in your streaming software.

Now go to camera's webpage -> network -> RTMP Settings.

input the RTMP stream URL:

<rtmps://live-api-s.facebook.com:443/rtmp/FB-117626344422167-0-AbzhlyyXbQGNT47w>

(Format: Stream URL/Stream Key)

RTMP(S) Settings

First Stream On Off Video Audio

MRL

Second Stream On Off Video Audio

MRL

Save and reboot the camera, it will stream to Facebook.

◆ **Connect Camera to Controller Keyboard**

Some information you need:

User Name: admin **Password:** admin

Sony Visca port: 52381 **IP Visca UDP port:** 1259

IP Visca TCP port: 5678 **Onvif Port:** 2000

We recommend to use Sony Visca or IP Visca control protocols, the two protocols are more steady and work better.

Let's use FoMaKo KC-608 IP controller for example:

(1) Connection: Camera and the IP controller must be in the same LAN (connect to the same router/switch by network cable)

(2) Enable controller's DHCP, then reboot the controller

Then, router will assign an IP address for the controller

(3) press "Setup" ->Add: Sony Visca (or IP Visca) -> input your camera's IP -> input port:52381 (IP Visca UDP:1259) -> input camera control ID(1-255 numbers)

(4) If you have more than one cameras need to add to the controller, please press "IP" button to add the camera's IP address to controller one by one.

◆ **How to output 4K video**

Camera's video resolution:

SDI output: max 1080P@60fps

HDMI output: max 4K(3840x2160)@60fps


IP(NDI)Output: max 4K(3840x2160)@60fps

USB Output: 4K(3840x2160)@30fps

So, if you want to output 4K video, please use HDMI, IP, NDI or USB video out, SDI video out max support 1080P.

Important:

- HDMI and IP(NDI) output max support 4K@25/30fps at the same time;
- If HDMI output set to 4K@50/60fps, then, IP(NDI) max support 1080P@60fps;
- If IP(NDI) output set to 4K@50/60fps, then, HDMI max support 1080P@60fps.

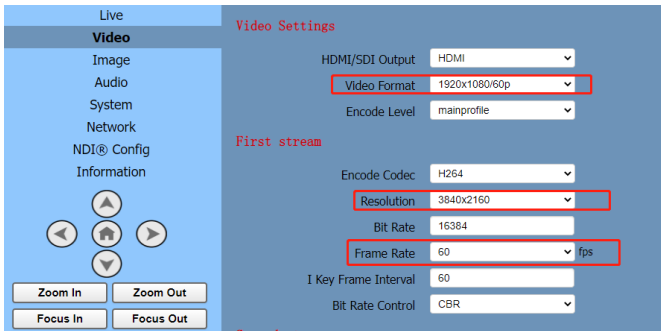

◆ **Simultaneous output three HD digital signals**

- (1) HDMI + USB + IP(NDI)
- (2) 3G-SDI + USB + IP(NDI)

Note: HDMI and 3G-SDI can't output at the same time.

If you need more supports, please contact us at: ivan@fomako.net, normally, we can reply you within 12 hours.

FoMaKo Supports Team

AI Tracking Guide

1. Turn on tracking

1.1 Single scenario

Press the **F3** on the remote control to start a trace .

When there is only one person in the scenario, press the F3 key (Figure I) on the remote control to start a trace, the camera will lock the target for tracking directly.

The screen is shown as the following figure, the tracking program starts successfully.(Figure II)

When the camera finds that the target is lost, it will stand still at the position where the target is lost for a few seconds and then return to the home position. It will automatically enter the tracking state until the target appears again



Figure I



Figure II

1.2 Multiplayer scenario

Press the **F3** on the remote control to start a trace .

If there are multiple people in the scenario, press the F3 key (Figure I) on the remote control to start a trace, a green wireframe will appear on the screen(Figure III) to indicate the tracking target. Select the object to be tracked and press the home key to start tracking. Then the green wireframe disappears, and the screen is shown as the following figure, the tracking program starts successfully.(Figure IV) .

If change a target is needed during Multi people tracking process, Press the left and right buttons on the remote control is help.

When the camera finds that the target is lost, it will stand still at the position where the target is lost for a few seconds and then return to the home position. It will automatically enter the tracking state until the target appears again



Figure III



Figure IV

2. Turn off tracking

In the tracking state, press the **F4** to exit tracking mode.

When you are willing to end the tracking, press the F4 key (Figure V) on the remote control to exit tracking mode. After tracking, the camera will return to home position, the screen is shown as the following figure, the tracking program exits successfully. (Figure VI)



Figure V



Figure VI

User Manual Catalogue

- 1** Safety Precautions..... 1
- 2** Packing List 1
- 3** Quick Start..... 1
- 4** About Product 2
 - 4.1 Feature.....2
 - 4.2 Specification.....2
 - 4.3 Interface and Switch4
 - 4.4 Dimension.....4
 - 4.5 Installation5
 - 4.6 Remote Control6
- 5** GUI Settings..... 7
 - 5.1 MENU7
 - 5.2 EXPOSURE7
 - 5.3 COLOR7
 - 5.4 IMAGE8
 - 5.5 P/T/Z8
 - 5.6 NOISE REDUCTION8
 - 5.7 SETUP8
 - 5.8 COMMUNICATION SETUP9
 - 5.9 RESTORE DEFAULT9
- 6** WEB Settings 9
 - 6.1 Access Camera9
 - 6.2 Control Camera9
 - 6.3 Video Settings.....10
 - 6.4 Image Settings.....11
 - 6.5 Audio Settings12
 - 6.6 System Settings.....12
 - 6.7 Network Settings.....12
 - 6.8 Device Information14
 - 6.9 Download Upgrade Program14
- 7** Troubleshooting 14

1 Safety Precautions

- During the installation and use of the equipment, all electrical safety regulations of the country and region of use must be strictly observed.
- Please use the power adapter that comes standard with this product.
- Please do not connect multiple devices to the same power adapter (exceeding the capacity of the adapter may generate excessive heat or cause a fire).
- Do not rotate head of the camera by hand, otherwise it may cause mechanical failure.
- When installing this product on a wall or ceiling, secure the device securely. When installing, make sure that there are no obstacles within the rotation range of the gimbal; do not turn on the power until all installations are completed.
- To avoid heat build-up, keep ventilation around the device smooth.

- If the device emits smoke, smells, or makes noises, please turn off the power immediately and unplug the power cord, and contact the dealer in time.
- This device is not waterproof, please keep the device dry.
- This product has no user serviceable parts, damage caused by disassembly by the user is not covered by the warranty.




Specific frequencies of electromagnetic field may affect the image of the camera!

2 Packing List

Name	Quantity
Camera	1
Power Adapter	1
Power Cable	1
RS232 Cable	1
USB Cable	1
Remote Control	1
User Manual	1

3 Quick Start

1) Please check connections are correct before starting.

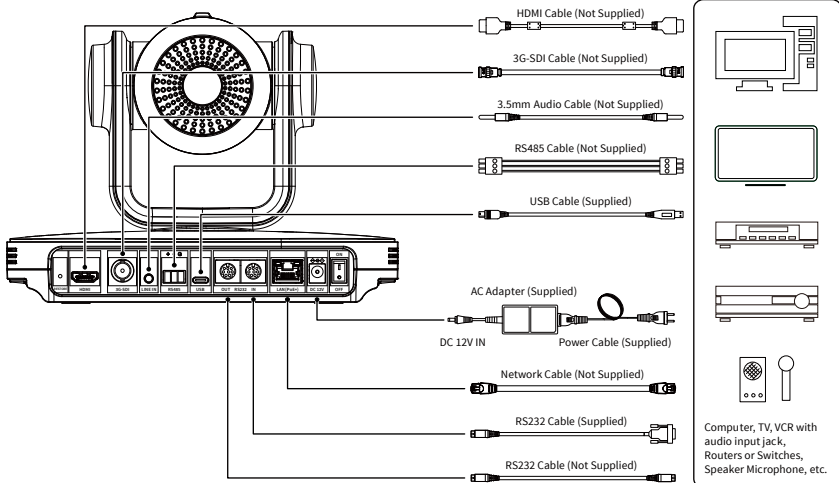

- 2) Connect the power adapter to the power connector on the rear panel of the camera. The power indicator on the front panel of the camera is on.
- 3) After the camera is powered on, it starts to initialize, right up to the limit position, and then both horizontal and vertical go to the middle position, the motor stops running, and the initialization is completed.
- 4) (Note: If preset 0 is saved, PTZ will be move to preset 0)

4 About Product

4.1 Features

● AI Tracking

With the help of the AI computing power of the chip, the camera is equipped with advanced AI algorithms to realize monocular humanoid tracking, which can realize automatic tracking of scenes such as education, conferences and live broadcasts.

● NDI® 6 & NDI|HX3 – Full IP Production

NDI 6 Platform: Broadcast-grade HDR, 10+ bit color, built in NDI Bridge for remote collaboration
 NDI|HX3 Transmission: H.265 encoding, <100ms latency, 4K@60p at ~80Mbps
 Single Cable Integration: Video, audio, PoE, PTZ, and Tally all over one Ethernet cable

● 4K UHD

Use 1/1.8-inch high-quality UHD CMOS sensor with a maximum of 8.42 million pixels can realize 4K (3840x2160) ultra-high-resolution high-quality images. And downward compatible with 1080p, 720p and other resolutions.

● 20x Optical Zoom

It adopts 4K ultra long focal lens with high quality and 8 million ultra-high resolution, 20x optical zoom, and the maximum field angle is 60°.

● HDMI 2.0

Support HDMI 2.0 interface, which can directly output 4KP60 uncompressed digital video.

● Low Light

The application of 3D noise reduction algorithm greatly reduces image noise. Even under the condition of ultra-low illumination, it still keep the picture clean and clear, and the SNR of image is as high as 55dB.

● Multiple Interfaces

Support HDMI and 3G-SDI interface, effective transmission distance of 3G-SDI is up to 150 meters (1080P30). HDMI or 3G-SDI, USB, LAN can output three HD digital signals at the same time.

● Remote Control

Through the RS232 and RS485 serial ports, the camera can be controlled remotely.

● Gravity Sensor

It supports automatic image flipping function, which is convenient for engineering installation and use.

4.2 Specifications

Camera	
Signal System	HDMI: 4KP25, 4KP30, 4KP50, 4KP60, 4KP59.94, 4KP29.97, 1080P25, 1080P30, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I59.94, 720P50, 720P59.94, 720P60 3G-SDI: 1080P25, 1080P30, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I59.94, 720P50, 720P59.94, 720P60
Sensor	1/1.8 inch, CMOS, Effective pixels: 8.42M
Scanning Mode	Progressive
Lens	20x, f = 6.25mm ~ 125mm, F1.58 ~ F3.95
Digital Zoom	16x
Minimum Illumination	0.5 Lux @ (F1.8, AGC ON)
Shutter	1/30s ~ 1/10000s

White Balance	Auto, Indoor, Outdoor, One Push, Manual, VAR
Backlight Compensation	Support
Digital Noise Reduction	3D Digital Noise Reduction
SNR	≥55dB
Horizontal FOV	60° ~ 3.5°
Vertical FOV	35.7° ~ 2.0°
Pan Angle	±170°
Tilt Angle	-30° ~ +90°
Pan Speed	1.8°/s ~ 80°/s
Tilt Speed	1.5°/s ~ 49°/s
H & V Flip	Support
Image Freeze	Support
PoE+	Support
Preset Position	255
Preset Accuracy	0.1°

USB Features

Operate System	Windows 7/8/10, Mac OS X, Linux, Android
Color System/ Compression	<ul style="list-style-type: none"> ● USB 3.0 (Optional): YUY2/H.264/H.265/MJPEG ● USB 2.0: H.264/H.265/MJPEG
Video Format	<ul style="list-style-type: none"> ● YUY2: (USB 3.0 support) max to 1080P@30fps USB 3.0/2.0 support: <ul style="list-style-type: none"> ● H.264 AVC: max to 2160P@30fps ● H.265 HEVC: max to 2160P@30fps ● MJPEG: max to 2160P@30fps
USB Audio	Support
USB Video Protocol	UVC 1.1 ~ 1.5
UVC PTZ	Support

Network Features

Video Compression	H.264/H.265/MJPEG
Video Stream	First Stream, Second Stream

First Stream Resolution	3840x2160, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x480, 640x360
Second Stream Resolution	720x480, 720x408, 640x480, 640x360, 480x320, 320x240
Bit Rate Control	CBR, VBR
Frame Rate	50Hz: 1fps ~ 50fps 60Hz: 1fps ~ 60fps
Audio Compression	AAC
Audio Bit Rate	96Kbps, 128Kbps
Protocols	NDI HX3, TCP/IP, HTTP, RTSP, RTMP/RTMPS, ONVIF, DHCP, SRT, Multicast

Interfaces

HDMI Interface	1 x HDMI: Version 2.0
3G-SDI Interface	1 x 3G-SDI: BNC type, 800mVp-p, 75Ω. Along to SMPTE 424M standard
LINE IN Interface	1 x LINE IN: 3.5mm Audio Interface
Communication Interface	1 x RS485: 3pin phoenix port, Max Distance: 1200m, Protocol: VISCA/Pelco-D/Pelco-P
	1 x RS232 IN: 8pin Min DIN, Max Distance: 30m, Protocol: VISCA/Pelco-D/Pelco-P
	1 x RS232 OUT: 8pin Min DIN, Max Distance: 30m, Protocol: VISCA network use
USB Interface	1 x USB: Type-C
LAN(PoE+) Interface	1 x LAN: 10M/100M/1000M Adaptive Ethernet Port, support PoE+
Power Jack	JEITA type (DC IN 12V)

General Specifications


Tally Indicator	1
Power Indicator	1
Status Indicator	1
Restore Key	1
Power Switch	1

Input Voltage	DC 12V/PoE+(802.3at)
Input Current	Max. 2A
Operating Temperature	0°C ~ 40°C
Storage Temperature	-40°C ~ 60°C
Power Consumption	Max. 18W
Dimension	223mm x 163mm x 166mm
Net Weight	About 1.8Kg






Product specifications and parameters are subject to change without notice.

4.3 Interface and Switch

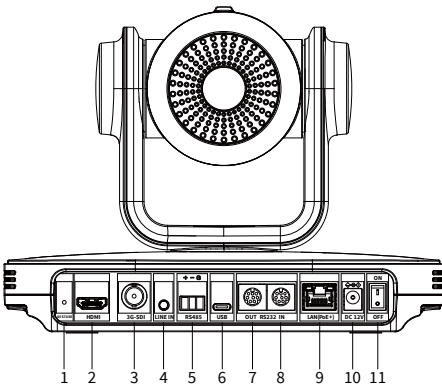


Item	Name
1	RESTORE Key
2	HDMI Interface
3	3G-SDI Interface
4	LINE IN Interface
5	RS485 Interface
6	USB Interface
7	RS232 OUT Interface
8	RS232 IN Interface
9	LAN(PoE+) Interface
10	DC 12V Interface
11	Power Switch

4.4 Dimension

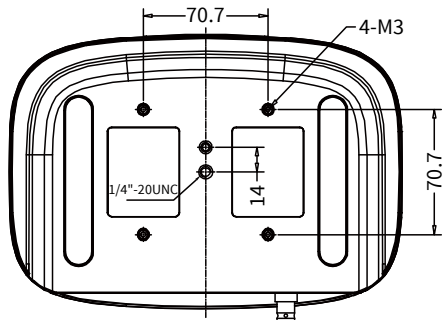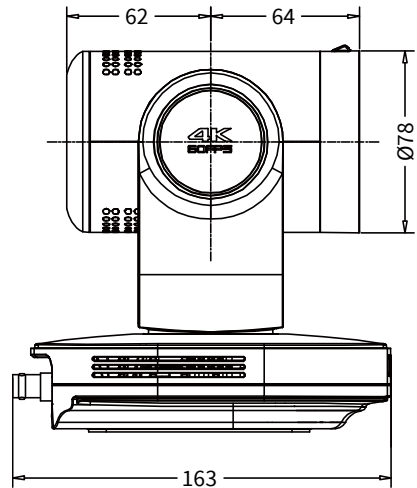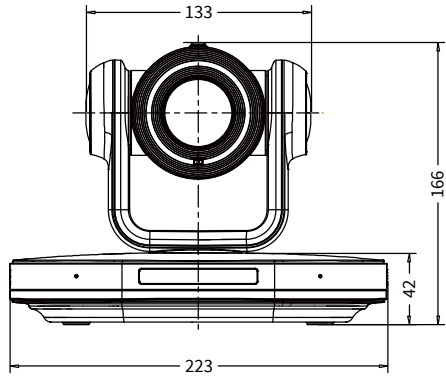


4.5 Installation

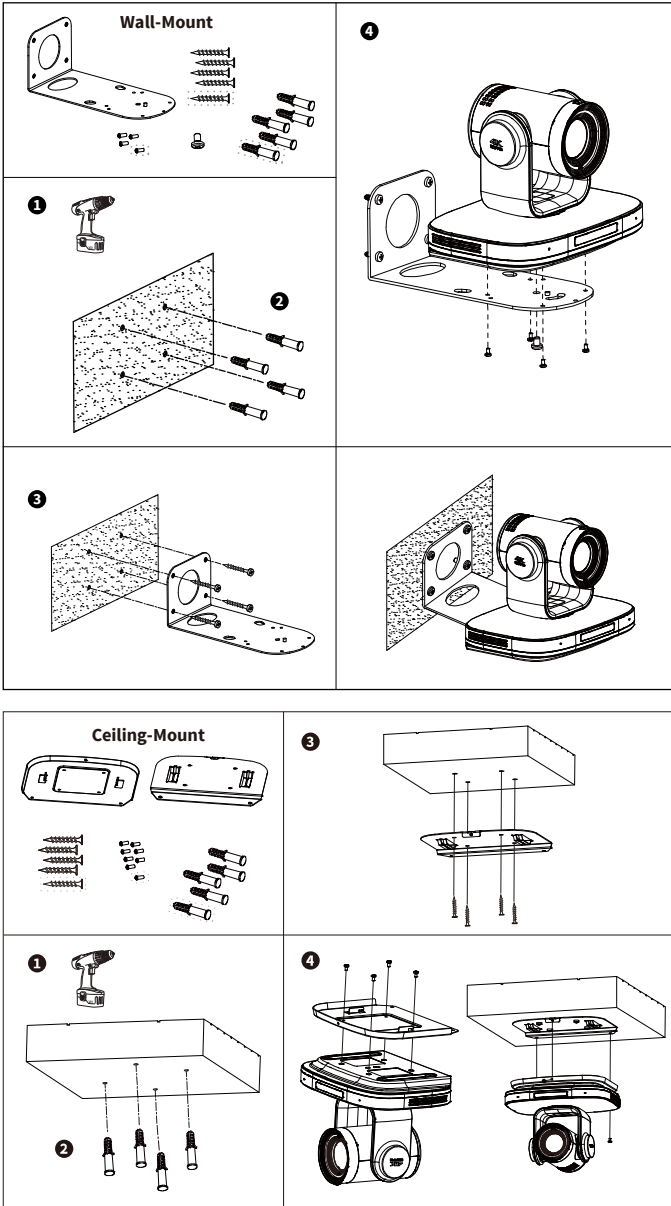

The installation diagram is for reference only. The brackets and screws are not standard. For packing accessories, please refer to the actual product.

4.6 Remote Control

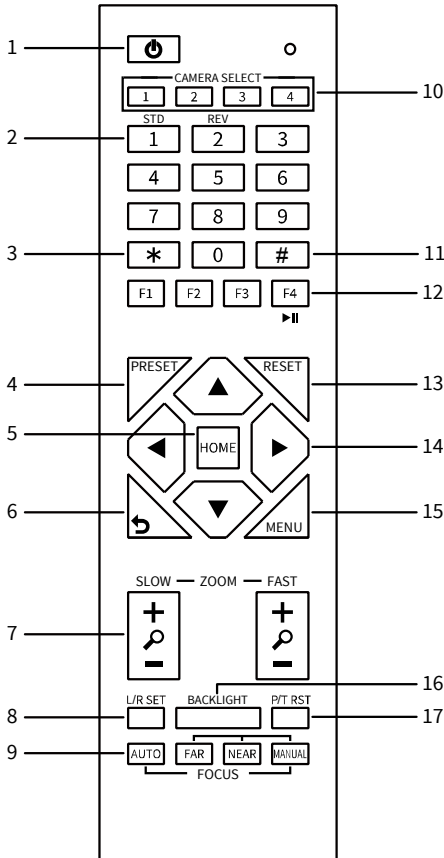

Key Description

1. Standby Key

Press to enter standby mode

2. Number Key

Press to set preset or call preset

3. *Key

Use with other keys

4. PRESET Key

Set preset: [PRESET] + Number key (0-9)

5. HOME Key

Confirm selection or press to turn PTZ back to the middle position

6. Return Key

Press to return to the previous menu

7. ZOOM Key

- SLOW: Zoom In [+] or Zoom Out [-] slowly
- FAST: Zoom In [+] or Zoom Out [-] fast

8. L/R SET Key

- Standard: Simultaneously press L/R SET + 1
- Reverse: Simultaneously press L/R SET + 2

9. FOCUS Key

Auto/Manual/Far/Near focus

10. CAMERA SELECT Key

Press to select and control the camera

11. # Key

Use with other keys

12. IR Remote Control Key

- [*]+[#]+[F1]: Address 1
- [*]+[#]+[F2]: Address 2
- [*]+[#]+[F3]: Address 3
- [*]+[#]+[F4]: Address 4

13. RESET Key

Clear preset position: [RESET] + Number key (0-9)

14. PTZ Control Key

PTZ moved according to the arrow indicates

15. MENU Key

Press to enter or exit OSD Menu

16. BACKLIGHT Key

Backlight ON/OFF: Press repeatedly to enable or disable the backlight compensation.

NOTE:

- Effective only in auto exposure mode.
- If there is a light behind the subject, the subject will become dark, press the backlight key to enable the backlight compensation. Press again to disable this function.

17. P/T RST (PTZ Reset) Key

PTZ starts to self-test after pressed it


Shortcut Set

- [*]+[#]+[1]: OSD menu default English
- [*]+[#]+[3]: OSD menu default Chinese
- [*]+[#]+[4]: Display current IP address
- [*]+[#]+[6]: Quickly recover the default
- [*]+[#]+[8]: View the camera version
- [*]+[#]+[9]: Quickly set up inversion
- [*]+[#]+[MANUAL]: Restore default IP address

5 GUI Settings


5.1 MENU

Press [MENU] key to display the main menu on the normal screen, using arrow key to move the cursor to the item to be set. Press the [HOME] key to enter the corresponding sub-menu.

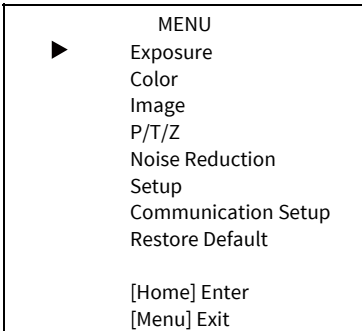

5.2 EXPOSURE

Move the main menu cursor to [Exposure], and press [HOME] key enter the exposure page, as shown in the following figure.

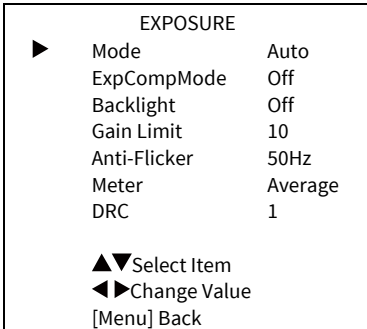

Mode: Auto, Manual, SAE, AAE, Bright.

ExpCompMode: On, Off (Effective only in Auto mode).

ExpComp: -7 ~ 7 (Effective only in ExpCompMode item to On).

Backlight: On, Off (Effective only in Auto mode).

Bright: 0 ~ 17 (Effective only in Bright mode).

Gain Limit: 0 ~ 15 (Effective only in Auto, SAE, AAE, Bright mode).

Anti-Flicker: Off, 50Hz, 60Hz (Effective only in Auto, AAE, Bright mode).

Meter: Average, Center, Smart, Top.

Iris: F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0, Close (Effective only in Manual, AAE mode).


Shutter: 1/30, 1/60, 1/90, 1/100, 1/125, 1/180, 1/250, 1/350, 1/500, 1/725, 1/1000, 1/1500, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000 (Effective only in Manual, SAE mode).

Gain: 0 ~ 7 (Effective only in Manual mode).

DRC: 0 ~ 8.

5.3 COLOR

Move the main menu cursor to [Color], and press [HOME] key enter the color page, as shown in the following figure.

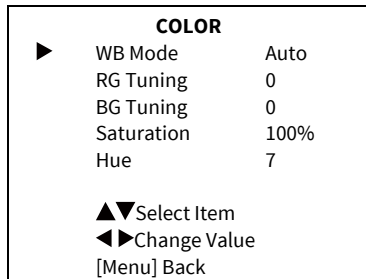

WB Mode: Auto, Indoor, Outdoor, One Push, Manual, VAR.

RG: 0 ~ 255 (Effective only in Manual mode).

BG: 0 ~ 255 (Effective only in Manual mode).

RG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR Mode).

BG Tuning: -10 ~ +10 (Effective only in Auto, One Push, VAR Mode).


Saturation: 60% ~ 200%.

Hue: 0 ~ 14.

Color Temp: 2500K ~ 8000K (Effective only in VAR mode).

5.4 IMAGE

Move the main menu cursor to [Image], and press [HOME] key enter the image page, as shown in the following figure.

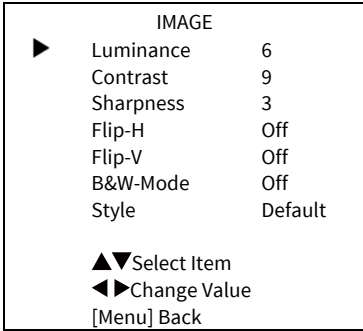

Luminance: 0 ~ 14.

Contrast: 0 ~ 14.

Sharpness: 0 ~ 15, auto.

Flip-H: On, Off.


Flip-V: On, Off.

B&W-Mode: On, Off.

Style: Default, Norm, Bright, PC.

5.5 P/T/Z

Move the main menu cursor to [P/T/Z], and press [HOME] key enter the P/T/Z page, as shown in the following figure.

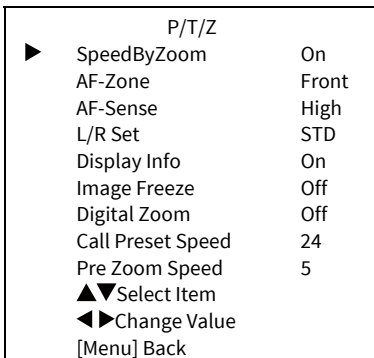

SpeedByZoom: On, Off.

AF-Zone: Front, Top, Center, Bottom.

AF-Sense: Low, Normal, High.

L/R Set: STD, REV.

Display Info: On, Off.

Image Freeze: On, Off.


Digital Zoom: Off, 2x, 4x, 8x, 16x.

Call Preset Speed: 1 ~ 24.

Pre Zoom Speed: 0 ~ 7.

5.6 NOISE REDUCTION


Move the main menu cursor to [Noise Reduction], and press [HOME] key enter the noise reduction page, as shown in the following figure.

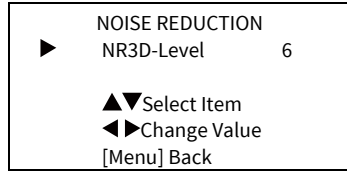

NR3D Level: Off, 1 ~ 9.

5.7 SETUP

Move the main menu cursor to [Setup], and press [HOME] key enter the setup page, as shown in the following figure.

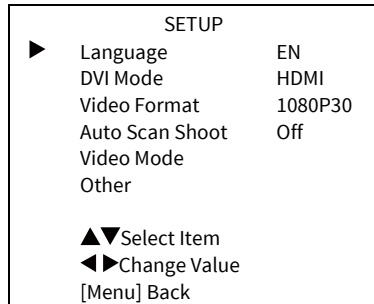

Language: EN, Chinese, Russian.

DVI Mode: HDMI, DVI.

Video Format: 4KP25, 4KP29.97, 4KP30, 4KP50, 4KP59.94, 4KP60, 1080P30, 1080P25, 1080P50, 1080P60, 1080P59.94, 1080P29.97, 1080I50, 1080I60, 1080I59.94, 720P60, 720P59.94, 720P50.

Auto Scan Shoot: On, Off.

Video Mode: SDI-3G Mode, Video Output.

SDI-3G Mode: LEVEL-A, LEVEL-B.

Video Output: HDMI, SDI.

Other: Auto Inversion, Tally Mode, USB2.0 Audio.


Auto Inversion: On, Off.

Tally Mode: On, Off.

USB2.0 Audio: On, Off (Only for USB2.0).

5.8 COMMUNICATION SETUP

Move the main menu cursor to [Communication Setup], and press [HOME] key enter the communication setup page, as shown in the following figure.

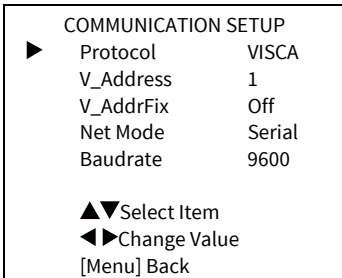

Protocol: Auto, VISCA, PELCO-D, PELCO-P.

V_Address: 1 ~ 7 (Effective only in Auto, VISCA protocol).

V_AddrFix: On, Off (When set to On, useless in 88 30 01 FF Command).

P_D_Address: 0 ~ 254 (Effective only in Auto, PELCO-D protocol).


P_P_Address: 0 ~ 31 (Effective only in Auto, PELCO-P protocol).

Net Mode: Serial, Paral.

Baudrate: 2400, 4800, 9600, 38400.

5.9 RESTORE DEFAULT

Move the main menu cursor to [Restore Default], press [HOME] key enter restore default page, as shown in the following figure.

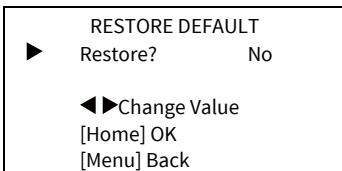

Restore: Yes, No.



GUI menu and parameters are subject to change without notice.

6 WEB Settings

6.1 Access Camera

Access camera's IP address (for example: <http://192.168.100.88>) to pop up the login window, then input username (default: admin) and password (default: admin). After login, it will show as below:



6.2 Control Camera

All pages include two menu bars:

 
Real time monitoring: displaying video image

Parameter setup: with function buttons.

A. Video Viewing Window


Video viewing window must be same as video resolution, the bigger the resolution is, the bigger the playing area is. Double click viewing window, will show full-screen, double click again, will return to initialized size.

Status bar in viewing window shown as below:



- 1) Video playback pause button: control real-time video pause, stop the last picture, click recoverable video again.
- 2) Audio control buttons: can adjust the volume or set silent mode.
- 3) Full screen switch button.

B. PTZ Setup

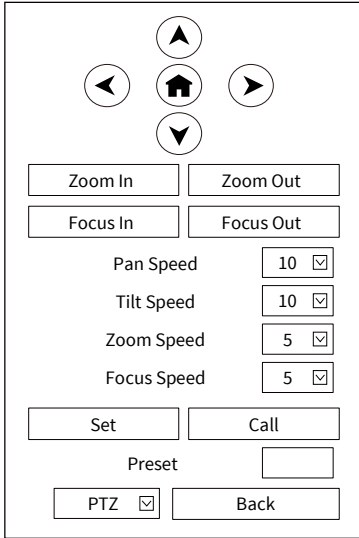

1) Pan and Tilt Control

Up, Down, Left and Right arrows and the home button allow you to manually drive the camera to the desired position.

2) Zoom

Zoom In and Zoom Out buttons allow for wide or narrow view of the space.

3) Focus

Focus In and Focus Out buttons allow for fine manual focus adjustment if the camera has any problems auto focusing on the difficult object.

4) PTZ Speeds

Pan speed can be set at any rate between 1 ~ 24, Tilt speed can be set at any rate between 1 ~ 20. Zoom and Focus speeds can be set at any rate between 1 ~ 7.

 
5) PTZ Presets

After manually setting up a shot that you would like to return to later, you can save presets for quick recall of these positions. Type a number between 0 and 254 into the Preset box.

Click the “Set” button to save the current location with that preset number. Click the “Call” button to cause the camera to return to that position. This enables smooth, quick and convenient control without the need to manually drive the camera.

You can set up preset that user want as below.

Method: Type preset number into the Preset box.




Preset: Optional items: 0 ~ 254.

6) PTZ/OSD Dropdown


From the dropdown menu, clicking the OSD option will open the on-screen display menu of the camera giving you control from within the IP interface.

 C. Language Selection



Click either “Chinese”, “English” or “Russian” to change the language of the webpage.

6.3 Video Settings

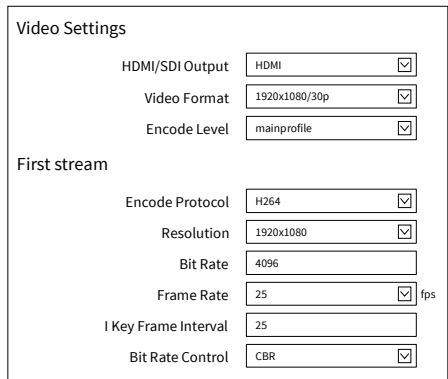

Second stream

Encode Protocol

Resolution

Bit Rate

Frame Rate fps

I Key Frame Interval

Bit Rate Control

1) HDMI/SDI Output

Support HDMI and SDI Output.

Only control HDMI and SDI video parameters

2) Video Format

HDMI output support 3840x2160/60p, 3840x2160/59.94p, 3840x2160/50p, 3840x2160/30p, 3840x2160/29.97p, 3840x2160/25p. Both HDMI and SDI output support 1920x1080/60p, 1920x1080/59.94p, 1920x1080/50p, 1920x1080/60i, 1920x1080/59.94i, 1920x1080/50i, 1920x1080/30p, 1920x1080/29.97p, 1920x1080/25p, 1280x720/60p, 1280x720/59.94p, 1280x720/50p.

3) Encode Level

Support mainprofile and highprofile two levels.

4) Encode Protocol

Support H.264, H.265 and MJPEG protocols.

5) Resolution

First stream support 3840x2160, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x480, 640x360. Second stream support 720x480, 720x408, 640x480, 640x360, 480x320, 320x240; The bigger resolution is, the clearer the image will be, more network bandwidth will be taken.

First stream and second stream only control IP/NDI Stream video parameters.

6) Bit Rate

The user can specify the bit rate. Generally speaking, the larger of the bit rate, the clearer of the image. However, the configuration of the bit rate needs to be combined with the network bandwidth. When the network bandwidth is narrow and the bit rate is configured larger, the

video stream cannot be transmitted normally, and the visual effect is worse.

7) Frame Rate

User can specify the size of the frame rate, generally, the frame rate greater, the image more smooth; Frame rate is smaller, the more sense of beating.

8) I Key Frame Interval

Set interval between 2 I frame, the bigger interval is the response will be lower from view window.

9) Bit Rate Control

Code stream control way:

CBR (Constant Bit Rate): Video coder will be coding according to preset speed.

VBR (Variable Bit Rate): Video coder will adjust the speed based on preset speed to gain the best image quality.

6.4 Image Settings

Brightness 6

Saturation 4

Contrast 9

Sharpness 3

Hue 7

Flip On Off

Mirror On Off

1) Brightness

Brightness of image: 0~14 (Default value is 6).

2) Saturation

Saturation of image: 0~14 (Default value is 4).

3) Contrast

Contrast of image: 0~14 (Default value is 9).

4) Sharpness

Sharpness of image: 0~16 (Default value is 3).

5) Hue

Hue of image: 0~14 (Default value is 7).

6) Flip

Turn On/Off the Flip function.

7) Mirror

Turn On/Off the Mirror function.

6.5 Audio Settings

Audio Settings

Audio Switch On

Audio Type AAC

Sample Rate 48K

Bit Rate 96K

Input Type LINE IN

Input Vol 20 dB

ADTS Options Off

1) Audio Switch

Enable or disable audio switch.

2) Audio Type

Optional items: AAC.

3) Sample Rate

Optional items: 44.1K, 48K.

4) Bit Rate

Optional items: 96K, 128K.

5) Input Type

Optional items: LINE IN, MIC.

6) Input Vol

The volume of the channel.

7) ADTS Options

Optional items: On, Off.

6.6 System Settings

Initialize

Reboot

User

UserName admin

Password

Guest guest

Password

1) Reboot

Click the “Reboot” button, system restart.

2) Username and Password

The user can modify the password (letters and Numbers only).

6.7 Network Settings

Lan Settings

IP Configuration Type Fixed IP Address

IP Address 192.168.100.88

Subnet Mask 255.255.255.0

Gateway 192.168.100.1

DNS Address 8.8.8.8

MAC Address D4:E0:8E:A9:73:45

Port Settings

HTTP Port 80

RTSP Port 554

TCP Port 5678

UDP Port 1259

Sony Visca 52381

RTMP(S) Settings

First Stream On Off Video Audio

MRL rtmp://192.168.100.138/live/stream0

Second Stream On Off Video Audio

MRL rtmp://192.168.100.138/live/stream1

SRT Settings

SRT On Off

SRT Port

SRT Encryption None

SRT Password

RTSP Settings

RTSP Auth On Off

ONVIF Settings

ONVIF On Off

ONVIF Auth On Off

Multicast Settings

Multicast On Off

Address

Port

NTP Settings

NTP time sync On Off

Time Zone

Server address

Time interval(min)

Main time show On Off

Position

Sub time show On Off

Position

1) Lan Settings

The camera enabled DHCP by default, camera’s ip address will shown on the screen. When you finished to add the camera to your network, you’d better change the IP from “Dynamic IP Address” to “Fixed IP Address”, then camera will keep currently IP, or when camera reboot or router reboot, router will assign a new IP address for the camera.

The MAC address cannot be modified.

2) Port Settings

A. HTTP Port
 IP address identifies the network device, the device can run multiple web applications, each network program using network port to transmit data, so data transmission to be carried out between the port and port. Port setting is to set

up web server program using which port to transmit. When port mapping, need to be consistent with the port number (default port: 80).

B. RTSP Port

The camera support RTSP protocol, use the VLC tools broadcast, default port: 554.

C. TCP Port

Support TCP connection then control camera, default port: 5678.

D. UDP Port

Support UDP protocol, default port: 1259.

E. Sony Visca

Support Sony Visca, default value: 52381.

3) RTMP(S) Settings

Setting the MRL of RTMP, select enable or disable video and audio. You can select control code stream of “On”, “Off”, “Video”, “Audio” between in the two streams.

4) SRT Settings

Turn On/Off SRT, Setting the SRT Port, SRT Encry and SRT Password.

5) RTSP Settings

Turn On/Off RTSP Auth.

6) ONVIF Settings

Turn On/Off ONVIF and ONVIF Auth.

7) Multicast Settings

Turn On/Off multicast. Setting the multicast address (default value is 224.1.2.3) and port (default value is 6688, then 6688 is the multicast port of the first stream; 6690 is the multicast port of the second stream).

8) NTP Settings

Turn On/Off NTP time sync, main time show and sub time show. Setting NTP server address, time interval, main stream position and sub stream position.

6.8 Device Information

Information	
Device ID	<input type="text" value="HD Camera"/>
Device Type	<input type="text" value="G50.V"/>
Software Version	<input type="text" value="SOC v2.0.23 - ARM 6.0.64S"/>
Webware Version	<input type="text" value="v1.5.5"/>
<input type="button" value="Submit"/> <input type="button" value="Cancel"/>	

6.9 Download Upgrade Program

If you need the camera upgrade program, please contact the manufacturer.



WEB interface and parameters are subject to change without notice.

7 Troubleshooting

Image

- The monitor shows no image
 - 1) Check that the camera power supply is connected, the voltage is normal, and the power indicator light is always on.
 - 2) Turn off the power switch to check whether the camera is self-testing.
 - 3) Check the cable of video platform and TV whether correct connection.
- The video image displayed by the camera lens is jittery
 - 1) Check whether the camera installed position be stabled.
 - 2) Check whether have vibrating machinery or object near the camera.
- There is no video image in Browser

IE browser does not support H5, you need to use VLC plug-in to view videos. Please access VLC website (<http://www.videolan.org/vlc>) download and install the 32-bit VLC media player, after it installed, access camera will have normal image display. Other mainstream browsers already support H5 and do not need to install the VLC plug-in.

- Unable to access camera through Browser
 - 1) Using PC to access the network to test whether the network access can work properly, first of all, the network fault caused by the PC virus can be eliminated, until the PC and camera can communicate with each other Ping.
 - 2) Disconnect the network, connect camera and PC separately, and reset the IP address of PC.
 - 3) Check IP address, subnet mask, and gateway settings for camera.
 - 4) Check whether the MAC address is conflicts.
 - 5) Check whether the web port is modified.
 - 6) The default web port is 80.
 - Forget the IP address or login password

Please remember (The default IP address: 192.168.100.88; default user name: admin; default password: admin).

Control

- Remote control cannot control
 - 1) Check and replace the new battery for the remote controller.
 - 2) Check whether the camera working mode is correct.
 - 3) Check whether the address of remote control can match the camera.
- Serial port cannot control
 - 1) Check whether the camera protocol, address and baud rate such is the same.
 - 2) Check whether the control line is connected well.



079.79.1101412_V1.0