

Onboarding for No-LCD IP Cameras

1. Included Models

1080P model: FMK12UH Pro(20x), FMK20UH NDI, FMK30UH Pro, FMK30UH NDI

4K model: K20UH, K20NS, K30NS

2. HDMI Video Output


- (1) PC HDMI Only Output, **NOT** support input, **CANNOT** for camera testing.
- (2) For 4K model: Use a 4K-rated HDMI cable paired with a 4K display.

3. How to Check IP Address

Wiring: camera --> POE switch --> router (POE switch optional)

Method 1: Using PTZ controller

- ① Connect to the same router as the camera
- ② Press [search] button to get IP

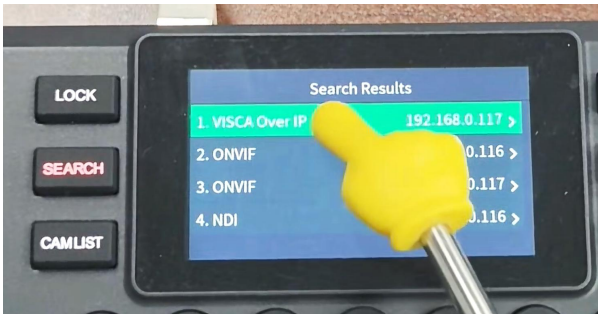


Method 2: Using HDMI cable + HDMI monitor

- ① Press [menu] button on remote control
- ② Go to Network Setting to get IP

Method 3: Using USB cable + PC

- ① Open PC's camera software and switch to PTZ camera's lens
- ② Same as Method 2

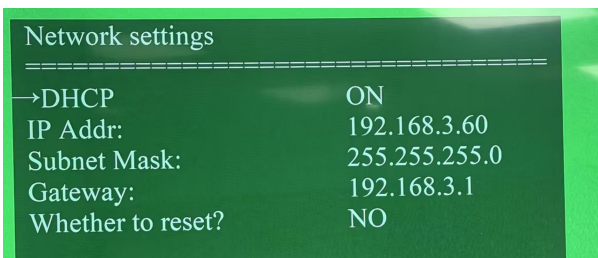

If you have any problems, please feel free to contact us at : support@fomako.net