


How to upgrade KC608N PTZ controller

(If you can't login KC608N, please check step 6)


1.Download the firmware ,you will get a “Keyboard_PTZV_1_xxxxx_release.zap” file.

2.Make sure the computer and KC608N PTZ controller are connected to the same router.


3.Go to KC608N's ->setup->update,
you will see KC608N's web URL, for example:
<http://192.168.3.244:8080>

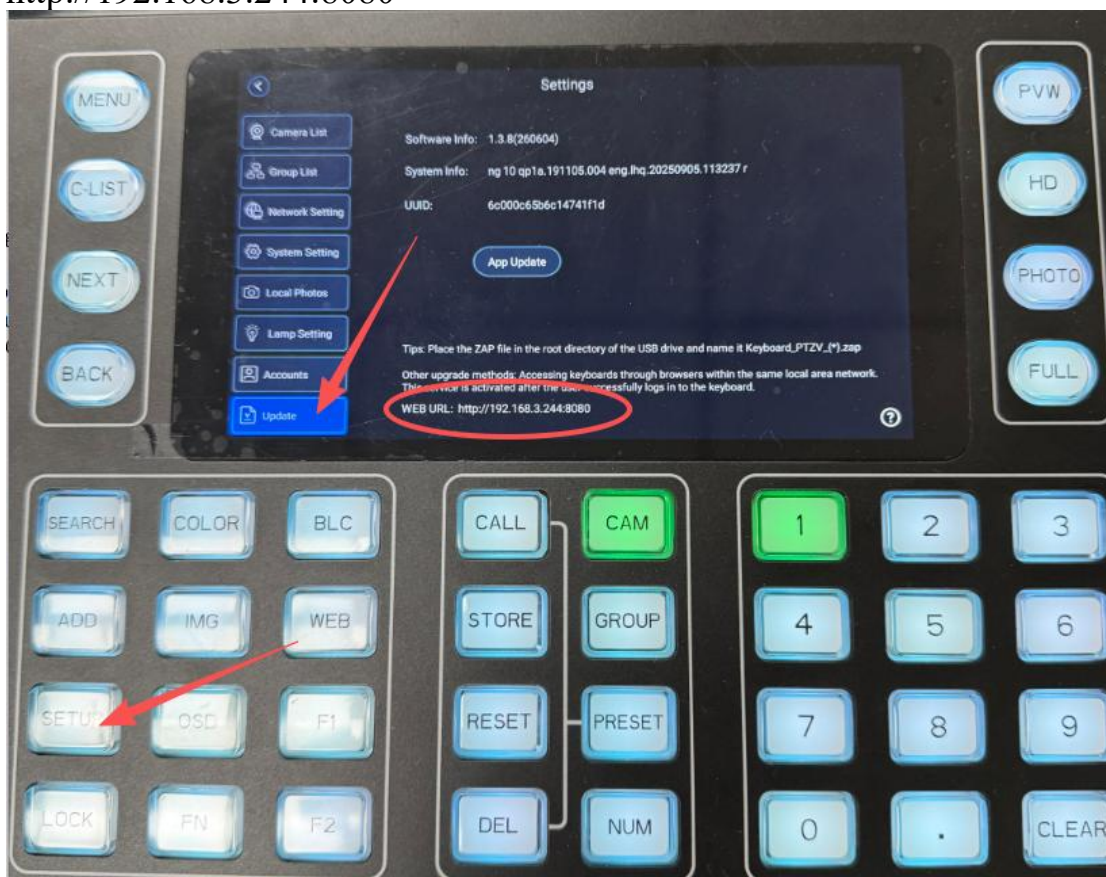

4.Visit KC608N's web URL in computer's web browser,choose firmware and upgrade KC608N:

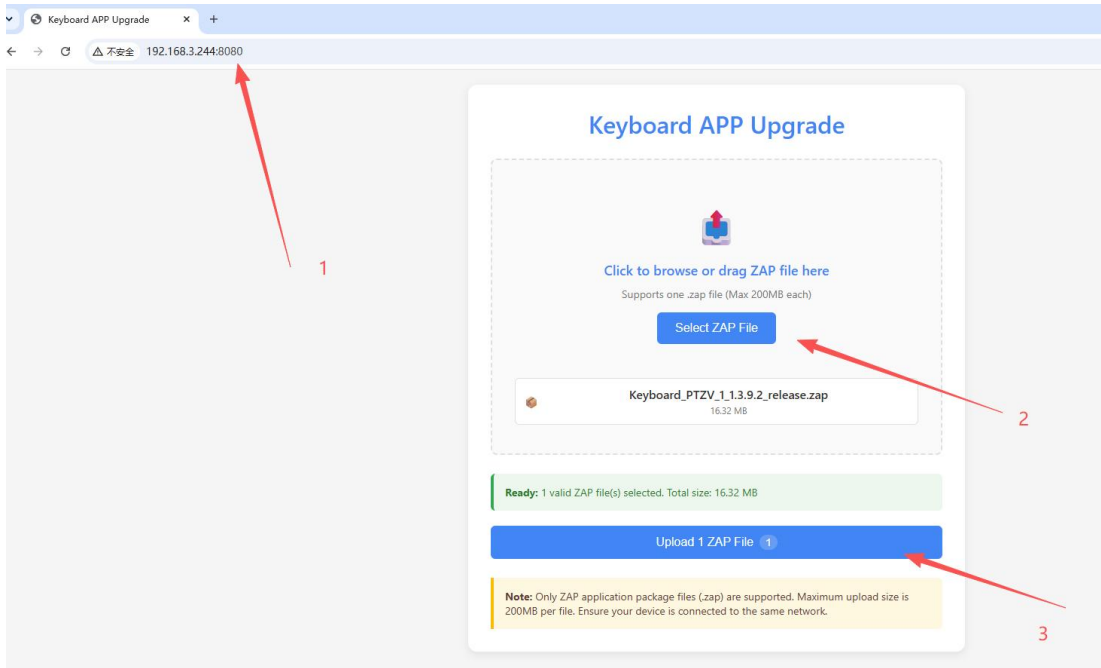


5. When upgrading finished, KC608N will reboot automatically. Now, the upgrade is now complete.

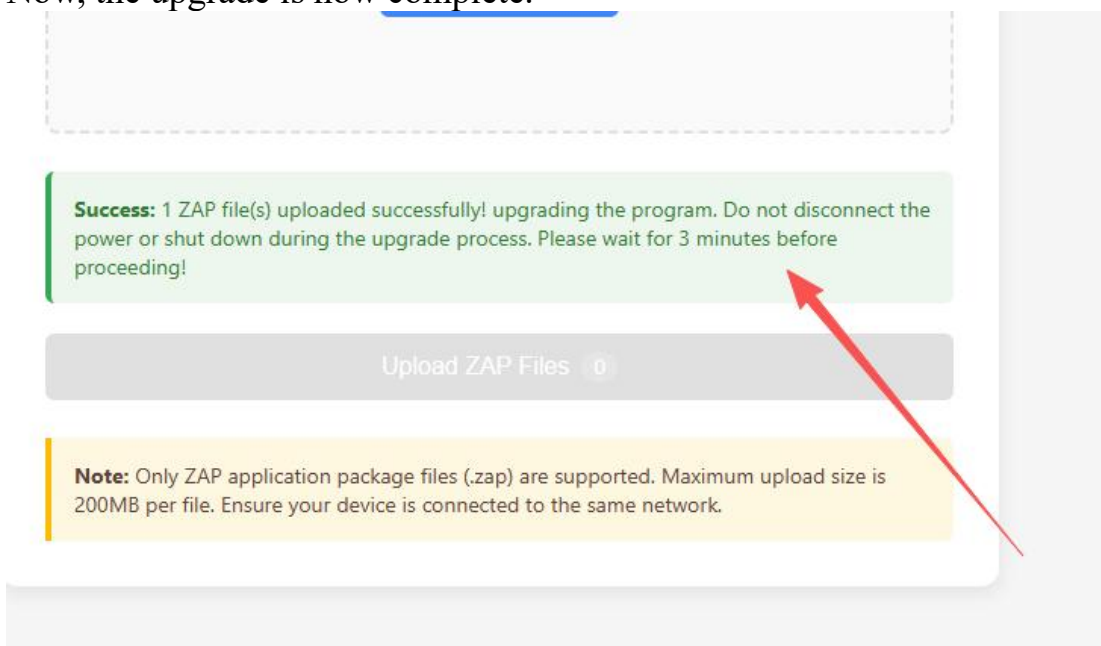

6. If you can't login KC608N anymore, please unplug KC608N's network cable and power it by power adapter, now you can login KC608N again.

Go to "setup" -> system setting -> clear data,

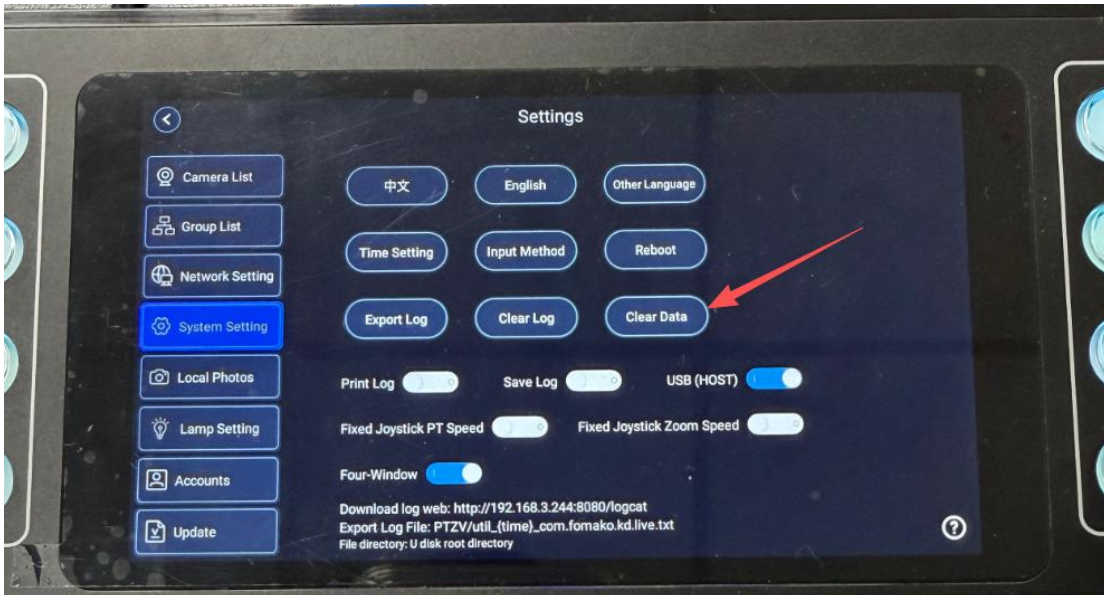

then KC608N will reboot, now you can plug the network cable into KC608N again.

Now, you can start to upgrade KC608N from “step 1”.

Any questions please contact us at: Support@fomako.net

FoMaKo Support Team